Igloo 800

External Enclosure for two (2pcs) 3.5″ Hard Drives

User Manual

3.5" ATA to FireWire 1394b External Storage Enclosure

Table of Contents

Chapter 1

Introduction

1.1 Designed to house two desktop size hard drives, the 'Igloo' 800 (IEEE 1394b) enclosure provides plenty of capacity for your daily backup. Top performance makes accessing and storing your data even faster!

1.2 System Requirement

    a. Hardware: PC or Mac with FireWire 800 or 400 interface

    b. Compatible Operating Systems (OS) types:

        Windows: FireWire 800(1394b): Windows 2000/ XP
                       FireWire 400*(1394a): Windows 98SE/ 2000/ ME/ XP

        Mac: FireWire 800(1394b): Mac OS 10.2 or higher
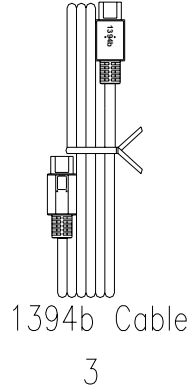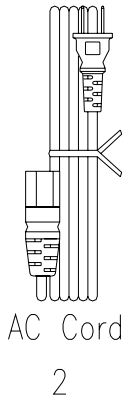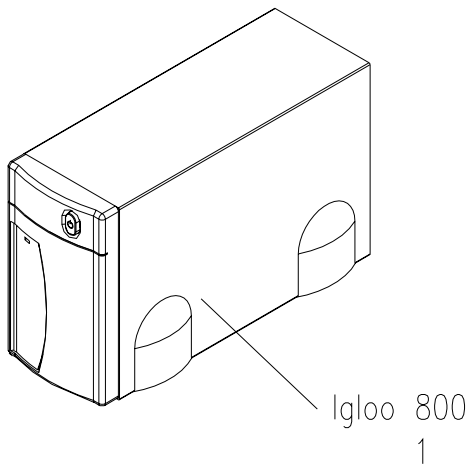   FireWire 400*(1394a): Mac OS 9.2 or higher

1.3 Package Dimensions: 25.0cm x 15.5cm x 9.0cm
                                     9.84" x 6.10" x 3.54"

* FireWire 400 9-6 pin cable is optional.

Chapter 2

Package Contents

1. Igloo 800 (ATA to 1394b External Storage Enclosure)

2. Power Cord

3. 1394b 9-9pin Cable

4. Accessory

Igloo 800
1

AC Cord
2

1394b Cable
3

Accessory
4

Chapter 3

Hardware Installation Guide

Unscrew the four screws on the bottom and take off the metal cover.
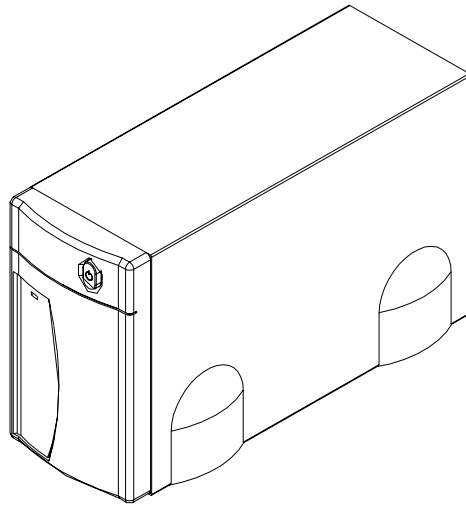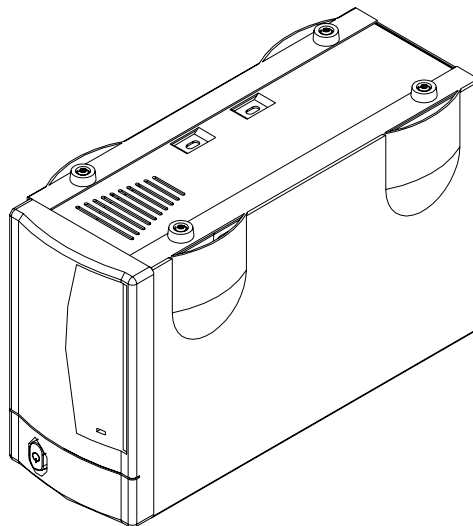(See Figure A – D)
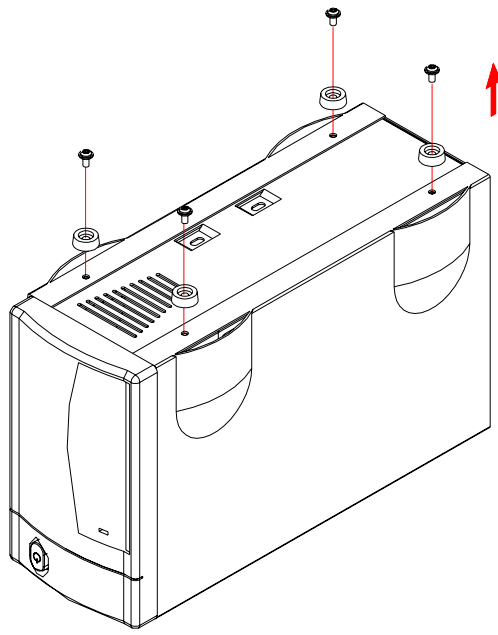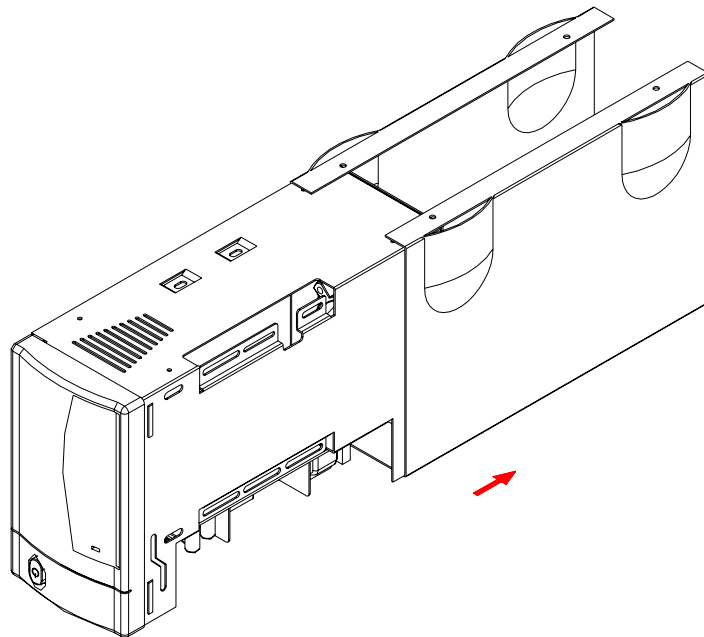
Figure A

Figure B

Figure C

Figure D

3.2 Hard Drive Installation

Connect the two hard drives, install them and fasten the screws.
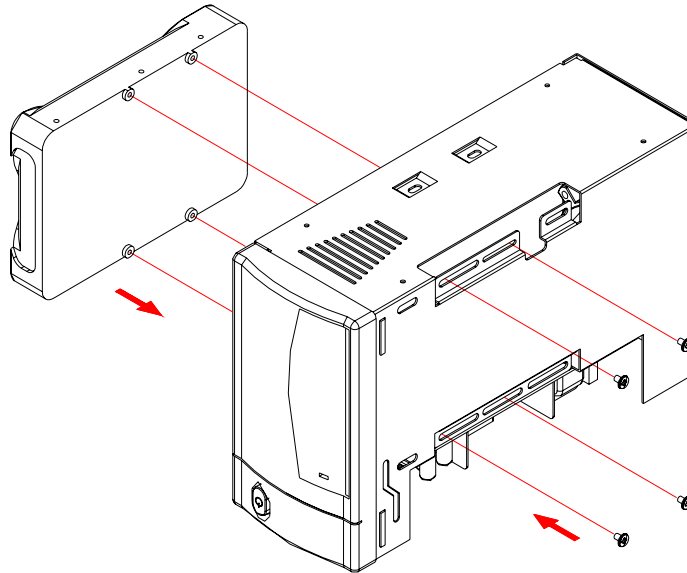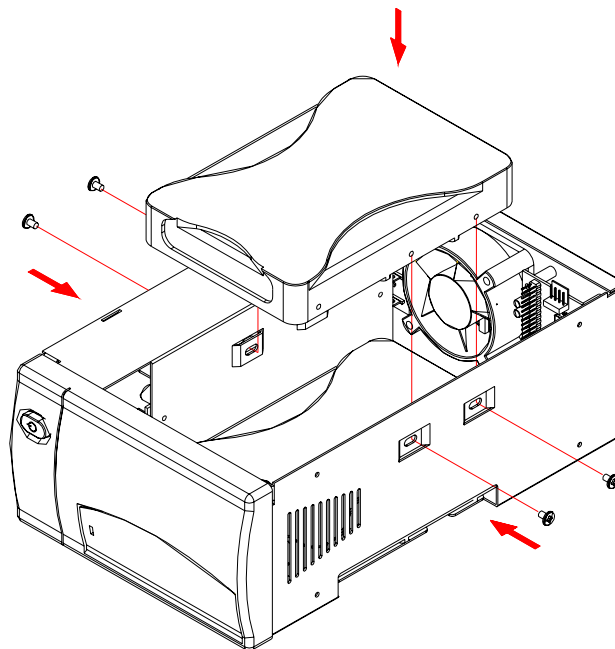
(See Figure E – F)

Figure E

Figure F

Hard Drive jumper settings: Set 1 Master & 1 Slave!

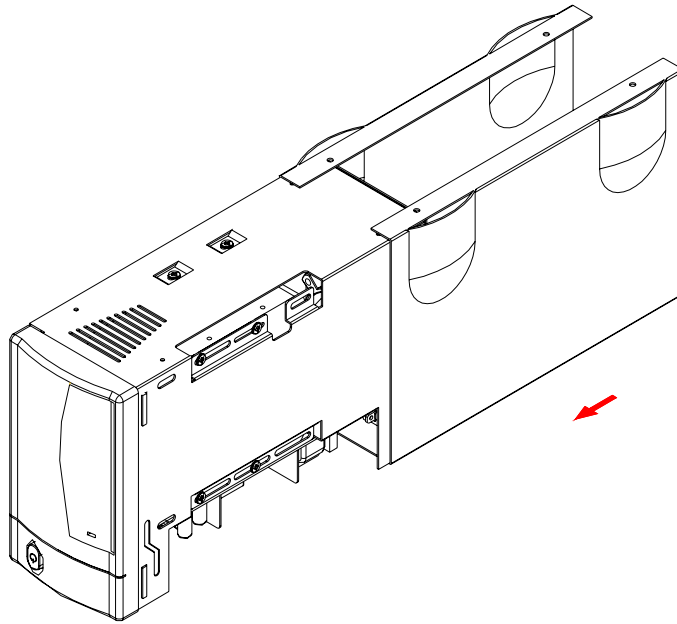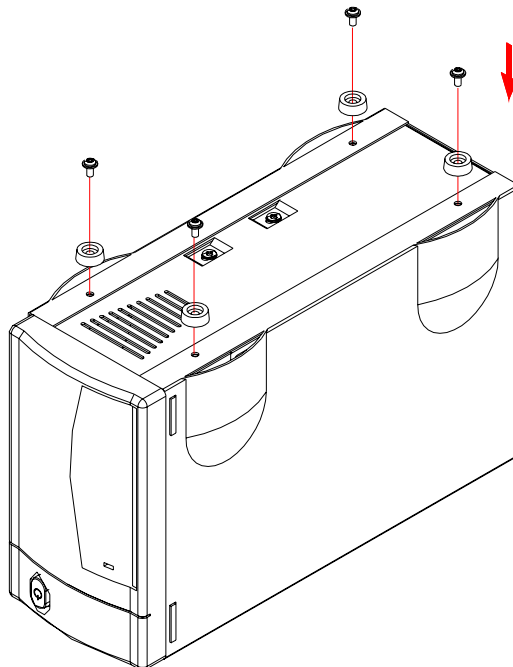Replace the cover and feet, then fasten the screws.
(See Figure G - H)

Figure G

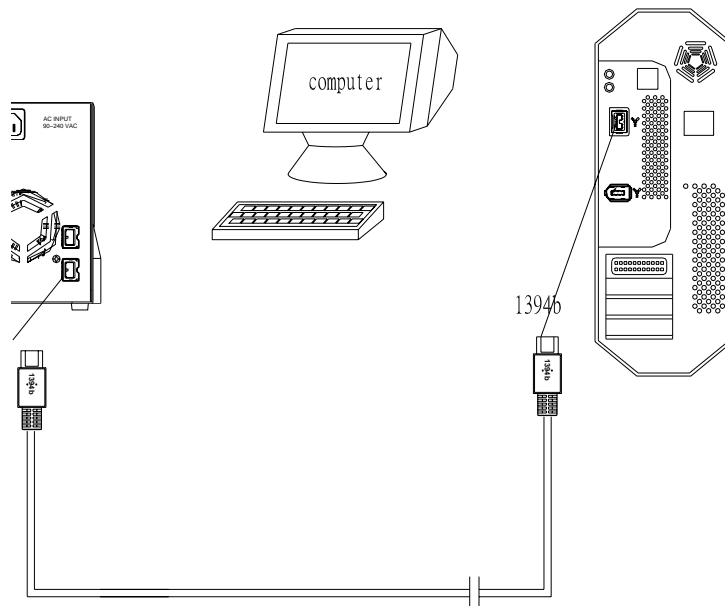Figure H

3.3 System Set Up

(See Figure I)

Figure I

- **Shows up as one (1) single large hard drive on your computer (Jumper settings 1 Master & 1 Slave).**
- **Identical Hard Drives suggested (same manufacturer, capacity and RPM)**
- **FireWire can be daisy chained.**
- **Igloo 800 is using RAID 0 and disk striping.**

Chapter 4

Installation Procedure

4.1 Installation on Windows 98SE/ ME / 2000 / XP
- Turn on your computer and start Windows ME / 2000 / XP
- Connect the Igloo and turn it on
- No separate driver required, let Windows search and install it automatically
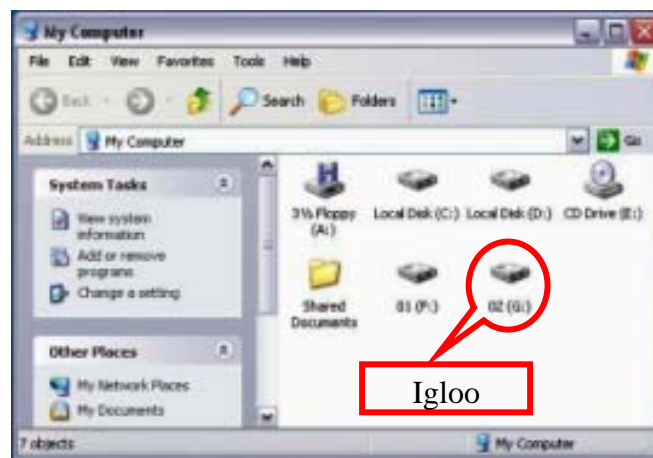- Open "My Computer", where you can see the external Hard Drive (see Figure 1)

Figure 1

4.2 Installation on Macintosh
- Turn on your computer and start Mac OS
- Connect the Igloo and turn it on
- No separate driver required
- The external Hard Drive will show up on the Desktop (see Figure 2)
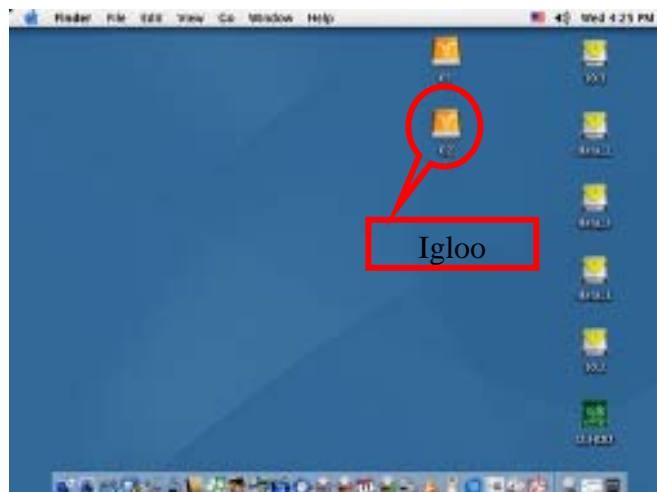
Figure 2

Chapter 5

Unplug Procedure

5.1 Windows 98SE/ ME / 2000 / XP

   a. Single click (right mouse button) on the taskbar icon (see Figure 3)
   b. Click on popup message (see Figure 4)

Figure 3

External Hardware Icon

Figure 4

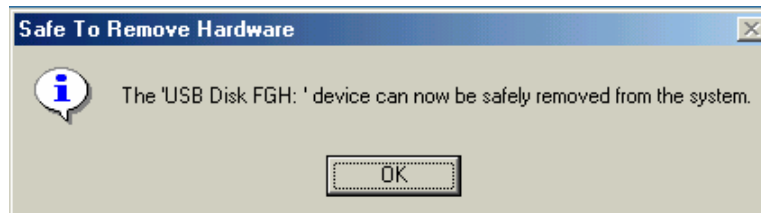   c. Click "OK" and remove the device (see Figure 5)

Figure 5

5.2 Mac OS

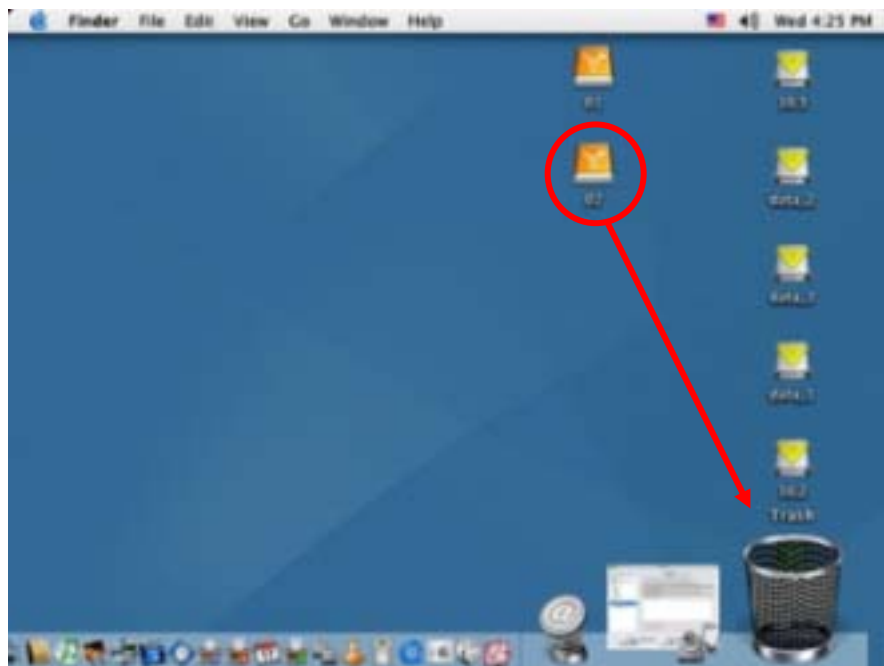   Drag the icon to the trash bin and remove the device (see Figure 6)
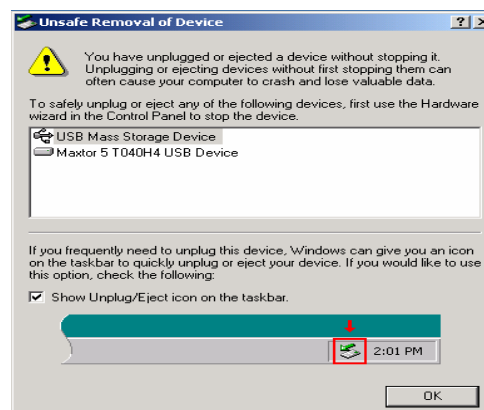
Figure 6

Attention!!

To assure no data will be lost, always follow the "unplug procedure". If not, data could be lost and the following message will show up:
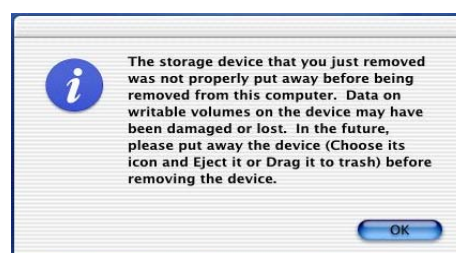
■ For Windows ME

■ For Windows 2000

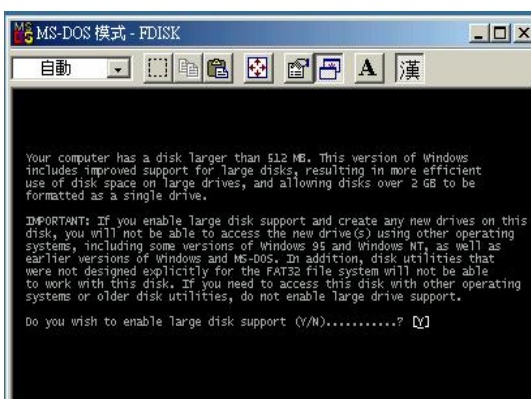## ■ For Mac

Chapter 6

Partitioning & Formatting

Please be aware that this will destroy all your existing data on the drive, so make sure you have a backup! This step is usually only required the first time you install the HDD or if you have a factory new HDD.

Windows 98SE, Windows ME

DOS command "fdisk"

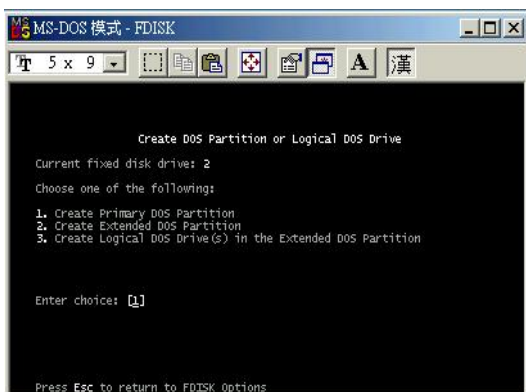Type "fdisk" and press Enter

Select "Y"
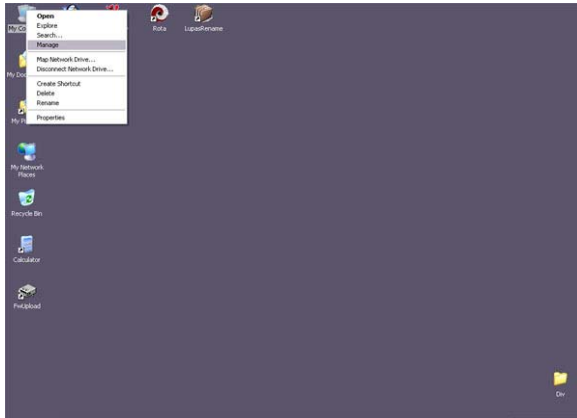

Enter "5" to change the disk
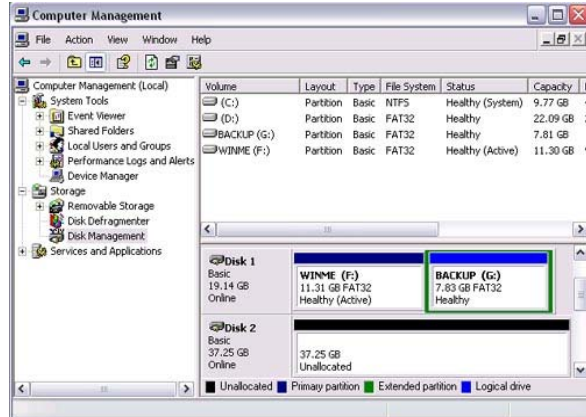

Select the drive you want to format

Choose "1" and follow the instructions
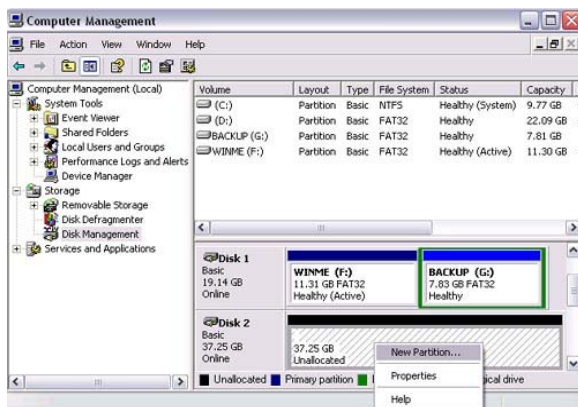
Windows 2000, Windows XP

Disk Management Program:

Select "My Computer", then right click → "Manage"

Select "Disk Management"

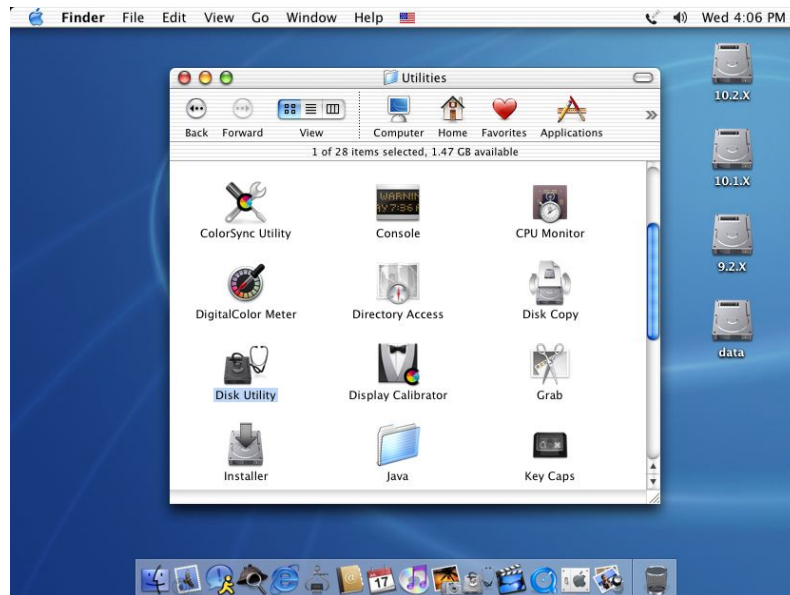Choose the drive you want to format and right click on it for further commands
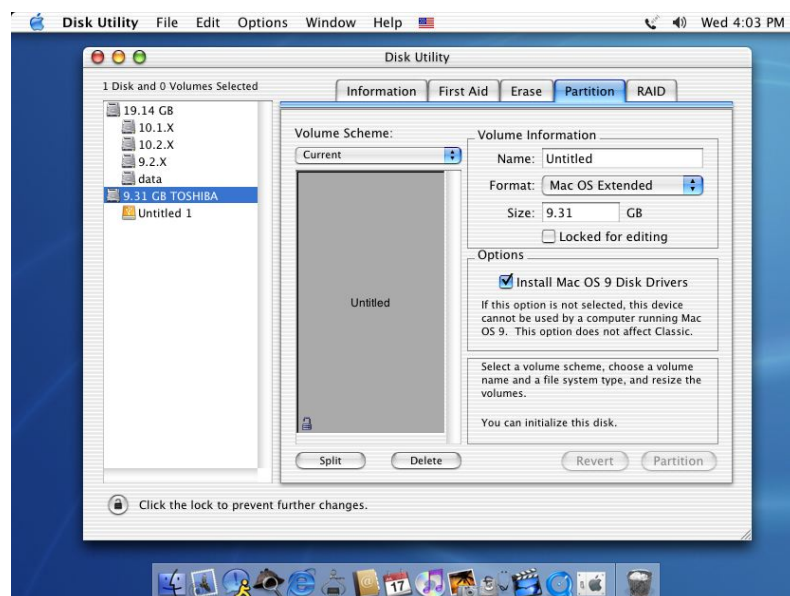

Follow the Partition Wizard

If you want to use it on many different OS including Mac, we recommend FAT32

Mac OS

Mac OS9.2 and before does not support creating partitions on an external drive. To do that you would need to purchase additional software. Initializing is no problem on all Operating Systems. For OSX use the Disk Utility to format and create partitions on your external disk.

Select "Disk Utility " in the Utilities folder

Choose your external drive and format it according to your requirement

Chapter 7

Technical Information

7.1 Features of the Igloo 800

For the LED indication, please consult the following table:

	Green LED	Yellow LED
Power ON, Standby	ON	ON
Power ON, Data Access	ON	Flash
Power OFF	OFF	OFF

7.2 FAQ

Q: What is RAID 0?
A: With RAID 0, the two (2) hard drives show up as one (1) single large hard drive. The data is written to both drives simultaneously, using disk striping.

Q: If one drive crashes, can I recover my data from the other drive?
A: No, if one drive crashes, all data is lost.